Package Contents

AVerTV Combo PCI-E

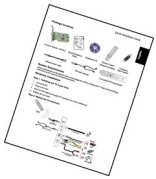

Quick Installation Guide

Installation CD

Remote Control (Batteries included)

Composite Input Adaptor

Windows MCE USB IR Blaster & Receiver

Data converter cable

Low profile PCI short bracket

8-pin to 10-pin cable

System Requirements

System requirements are described in detail on the package box. Before installing the TV tuner card and software, verify that your PC meets the described requirements.

Hardware Installation

Step 1. Installing the TV Tuner Card

1. Turn off the PC.
2. Remove the cover.
3. Insert the tuner card into an empty PCI-E expansion slot on the motherboard.
4. Replace the cover back.

Step 2. Making the Connections

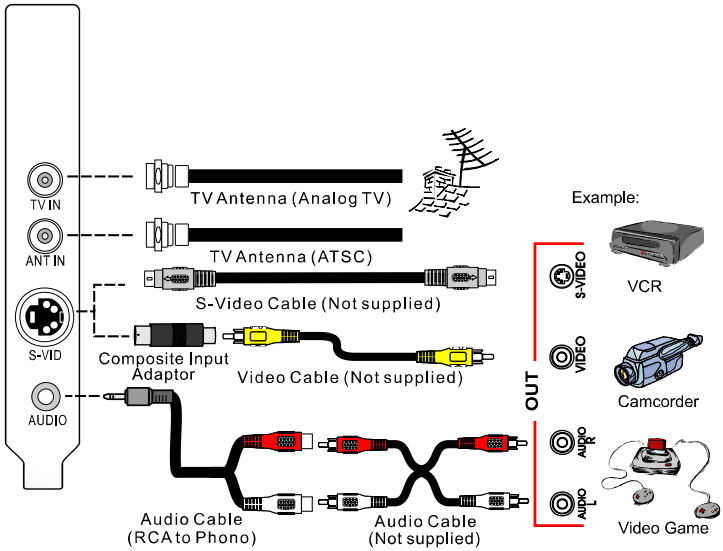

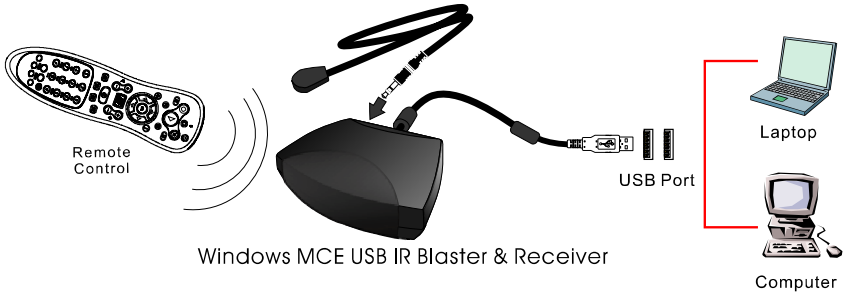

Installing Drivers and the TV Software Utility

Installing Drivers in Windows XP Media Center Edition 2005

To install drivers, users need to exit and switch to Windows mode if they are in Media Center Edition mode.

1. The "Found New Hardware Wizard" dialog box will appear. Just click **Cancel** to skip the Wizard.
2. Place the installation CD into the CD-ROM drive.
3. When the "AutoPlay" dialog box appears, select **Run Autorun.exe**.
4. When the installation main screen appears, choose **Install driver**.
5. If you didn't install a Windows XP Media Center Edition certificated DVD Decoder, please install it after restarting [**].
6. To Start Windows XP Media Center Edition, click **Start→Programs→Accessories→Media Center→Media Center**. In the MCE mode, select **Settings → TV**, and then follow the on-screen instructions to complete the configuration.

Installing Drivers in Windows Vista™ Media Center Edition

To install the drivers or the softwares, users need to exit and switch to Windows mode if they are in Media Center Edition mode.

1. The "Found New Hardware Wizard" dialog box will appear. Just click **Cancel** to skip the Wizard installation procedures.
2. Place the installation CD into the CD-ROM drive.
3. When the "AutoPlay" dialog box appears, select **Run Autorun.exe**.
4. When the installation main screen appears, choose **Install driver**.
5. If the "User Account Control" dialog box appears, select **Allow** to continue the process.
6. Start **Windows Media Center,** and then follow instruction on Setup Wizard.

NOTE:

1. If DirectX 9.0 or above is not installed in your system, usually the installation CD will automatically install it during the process of installation. Make sure your system has DirectX 9.0 or above installed so that the TV software utility can function properly.
2. The product does not come with a software DVD decoder. If users can playback DVD or MPEG-2 video files on the computer, there is no need to install a DVD decoder. However, if the Decoded Error message appears on the screen, please install the compatible DVD decoder via the Windows® XP Media Center Edition Partners site.

Uninstalling Drivers

Uninstalling Drivers in Windows XP Media Center Edition 2005

1. Go to the Windows mode first.
2. Click **Start** and then click on **Control Panel**.
3. Double-click on the **Add/Remove Programs** icon.
4. In the Add/Remove program list, select **AVerMedia M780 Driver** and then click on the **Change/Remove** button.

Uninstalling Drivers in Windows Vista™ Media Center Edition

1. Go to the Windows mode first.
2. Click **Start** and then click on **Control Panel**.
3. Double-click **Programs and Features** icon.
4. Select **AVerMedia M780 Driver** and click on the **Uninstall/Change** button.

Remote Control

Installation

Step 1. Insert the Battery

Use the two AA batteries, which are included in the package and insert it at the back of the remote control battery compartment.

Step 2. Connect the Receiver

Turn on the computer and plug the USB connector of the receiver into the PC's USB port.

Using the Remote Control

The remote control supports with most of the features in Media Center. No software or setup is needed. To use, just point the remote control at the receiver, and press the button.

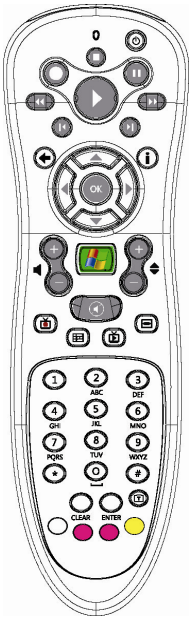

Navigation Buttons

Task	Control	Task	Control
Start Media Center, or go to Start menu.		Move the item to the right or enter submenu.	
Move the item up.		Activate the command.	
Move the item down.		Go to previous screen.	(BACK)
Move the item to the left or exit submenu.		Display info of the selected item.	(MORE)

Playback Buttons

Task	Control	Task	Control
For Playlist, play the selected item.		For Live TV, save the current show and press twice to record series. For Electronic Programming Guide, Record TV show or TV series	(RECORD)
For Playlist, skip to the next item. For Recorded TV, skip ahead of 29 sec.	(SKIP)	Rewind currently playing media; if pressed repeatedly, it cycles to 3 rewind speeds from slowest to fastest	(REW)
For TV, go back 5 seconds.	(REPLAY)	Speed up currently playing media; if pressed repeatedly, it cycles to 3 fast forward speeds from slowest to fastest	(FWD)
Stop currently playing media.	(STOP)	Turn off/on the sound.	(MUTE)
Briefly stop the playing media and press again to resume	(PAUSE)	Adjust the volume	(VOL)

AV and Power Buttons

Task	Control	Task	Control
Adjust the volume	(VOL)	Go to the Recorded TV page	(RECORDED TV)
Change the channel	(CH/PG)	Go to Electronic Programming Guide.	(GUIDE)
Turn off/on the sound.	(MUTE)	Switch to live TV if TV is off. If TV is paused, resume to real time TV programming.	(LIVE TV)
Command assigned to it. This button can "learn" to turn on the TV.	(TV)	If the computer is on, put the computer in standby mode. Press the PC button again to bring the computer out of standby and return to the desktop	(PC)

Numeric Keypad

The numeric keypad consists of numbers from 0 through 9 and two other keys: ENTER and CLEAR. You can use the numeric keypad to enter TV channels.

Teletext Buttons (option)

To display Page 100 (Teletext home page):

Press the TELETEXT button. Page 100 will appear in a few seconds and completely replace the TV picture, but it will not affect the TV sound.

To access Teletext pages:

Enter the 3-digit number of the page you want to display by using the numeric keypad. For example, enter 300 to access the A-Z Teletext Index.

To navigate between Teletext pages:

Press the UP and DOWN buttons on your remote control to navigate between Next and Previous pages.

To use the Fastext buttons:

The red, green, yellow, and blue buttons on your remote control correspond to the same colored buttons on your TV. Press a colored button on your remote control to go to a preset page.

⚠ Battery Safety Information:

- Store the batteries in a cool dry place.
- Do not dispose of used batteries in domestic waste. Dispose of batteries at special collection points or return to point of sale if applies.
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the remote control. Battery leakage and corrosion can damage this remote control, dispose of batteries safely.
- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.

FCC NOTICE (Class B)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission Statement

NOTE- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTION ON MODIFICATIONS

To comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be installed in computer equipment certified to comply with the Class B limits. All cables used to connect the computer and peripherals must be shielded and grounded. Operation with non-certified computers or non-shielded cables may result in interference to radio or television reception.

Changes and modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVerMedia be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

AVerMedia is registered trademarks of AVerMedia TECHNOLOGIES, Inc. IBM PC is a registered trademark of International Business Machines Corporation. Macintosh is a registered trademark of Apple Computer, Inc. Microsoft is a registered trademark and Windows is a trademark of Microsoft Corporation. All other products or corporate names mentioned in this documentation are for identification and explanation purposes only, and may be trademarks or registered trademarks of their respective owners.

COPYRIGHT

© 2007 by AVerMedia TECHNOLOGIES, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of AVerMedia TECHNOLOGIES, Inc.

THE MARK OF CROSSED-OUT WHEELED BIN INDICATES THAT THIS PRODUCT MUST NOT BE DISPOSED OF WITH YOUR OTHER HOUSEHOLD WASTE. INSTEAD, YOU NEED TO DISPOSE OF THE WASTE EQUIPMENT BY HANDING IT OVER TO A DESIGNATED COLLECTION POINT FOR THE RECYCLING OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT. FOR MORE INFORMATION ABOUT WHERE TO DROP OFF YOUR WASTE EQUIPMENT FOR RECYCLING, PLEASE CONTACT YOUR HOUSEHOLD WASTE DISPOSAL SERVICE OR THE SHOP WHERE YOU PURCHASED THE PRODUCT.

AVerTV Combo PCI-E

(Media Center Upgrade Kit)

Quick Installation Guide

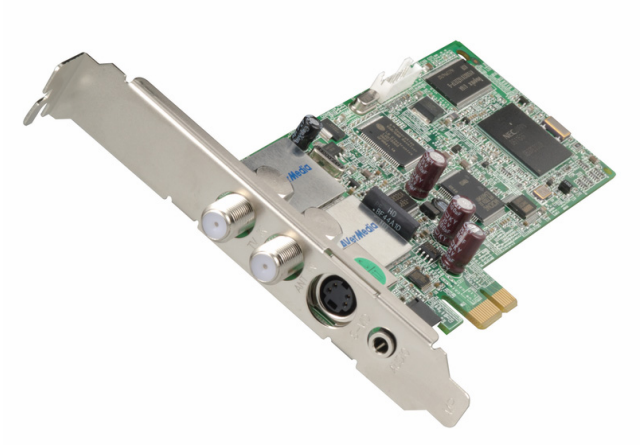

P/N 300AACFS
Made in Taiwan

AVerMedia®
www.avermedia.com